

# BREN PRO-SERIES QUICK GUIDE

## *Safety Blade How-To*


Using a utility knife or any other straight-type blade can cause permanent damage to your cutter's outer shell; if this happens, you will most likely also find that the internal wiring has been damaged as well. If this occurs your cutter will cease to operate and will need to be repaired; this repair is not covered under your warranty. Using scissors to cut your material from the cutter is less likely to cause damage to the machine, but this can cause material waste, as it is hard to get a straight-line cut. Your BREN Cutter is designed to be used with a Safety Blade, which ensure less material waste, even cuts, and no damage to your cutter.

The safety blade, included with your new cutter, is designed to fit perfectly in the cutting groove. This procedure prevents any damage to the cutter, is an easy process, and ensures a nice, straight cut line. See *Figure 1* for an illustration of the Safety Blade.



*Figure 1 - Safety Blade*

*Figure 2* shows both the incorrect and **correct** way to cut material on your BREN cutter.

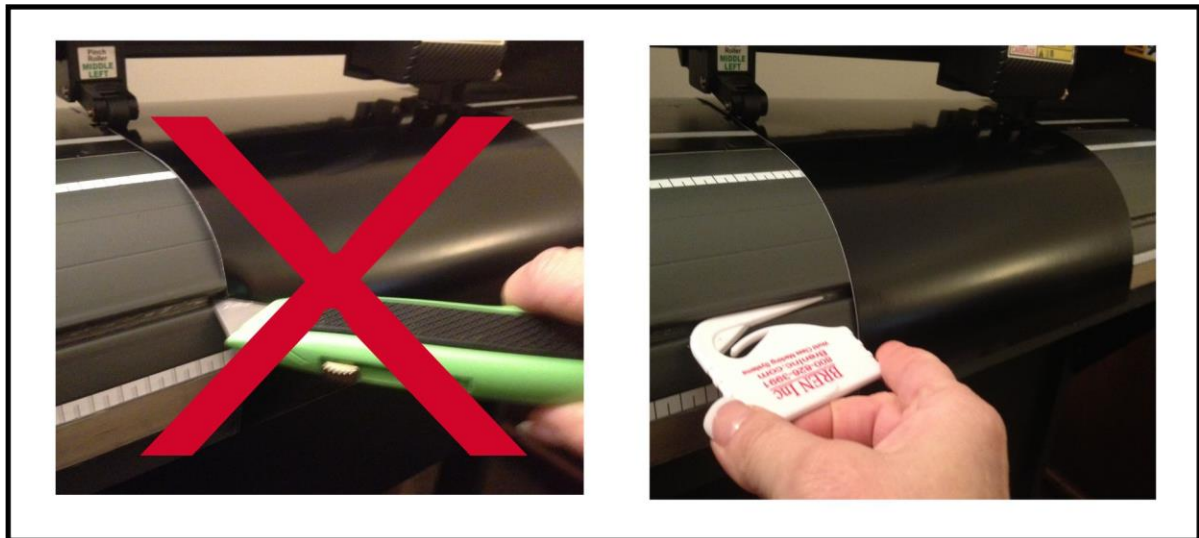

*Figure 2 - Correct Use of a Cutting Blade*

If you need to purchase a safety blade, please call BREN at 800-826-3991.